


## LRE SUSPENSION SYSTEM OWNER'S MANUAL

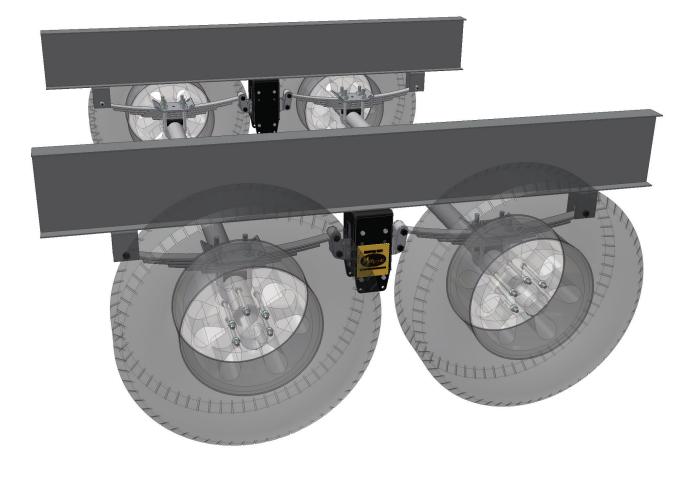

# **LRE SUSPENSION SYSTEM**

#### CONTENTS

INTRODUCTION	3
PARTS LISTING	4
MEASURING SHEAR SPRING DEFLECTION	5
MINIMUM CLEARANCE REQUIREMENTS	5
RUBBER SHEAR SPRING INSPECTION	5
BASIC TROUBLESHOOTING	6


# INTRODUCTION

Your recreational vehicle has been equipped with the MORryde Suspension System. The MORryde system is located between the tandem axles on your trailer, replacing the steel equalizer (see diagram below). This system is uniquely engineered to work in concert with your steel leaf spring suspension to improve overall suspension performance.


At the heart of your MORryde system are MORryde's time tested rubber shear springs that have been a mainstay in the recreational vehicle market for over 40 years. This new system has been engineered specifically for your trailer using the rubber shear spring's ability to isolate and absorb road shock and increase your trailer's overall dynamic axle travel. The combination of the MORryde rubber equalizer working in concert with your trailer's leaf springs will greatly enhance your suspension system's ability to deal with today's rough roads. This means you will experience:

- Smoother towing than with conventional leaf springs
- Better protection of your trailer from damaging road shock

This manual will outline basic troubleshooting and check procedures for your MORryde Suspension System. Service manuals and instructions will be provided with replacement parts in the unlikely event that service is required.

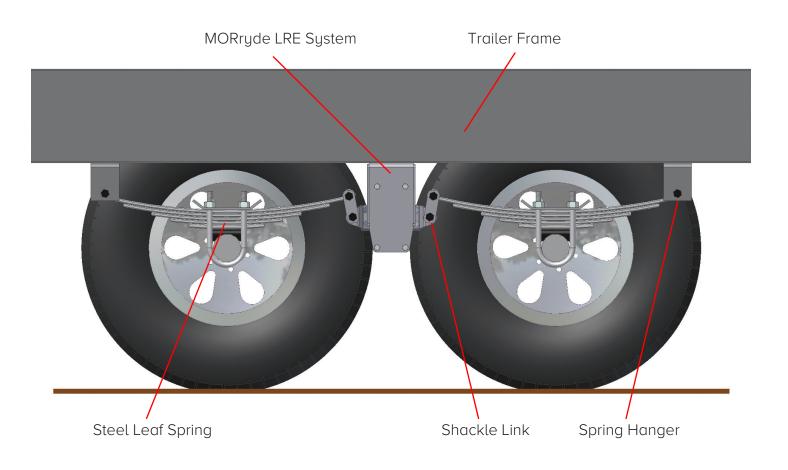

## PARTS LISTING

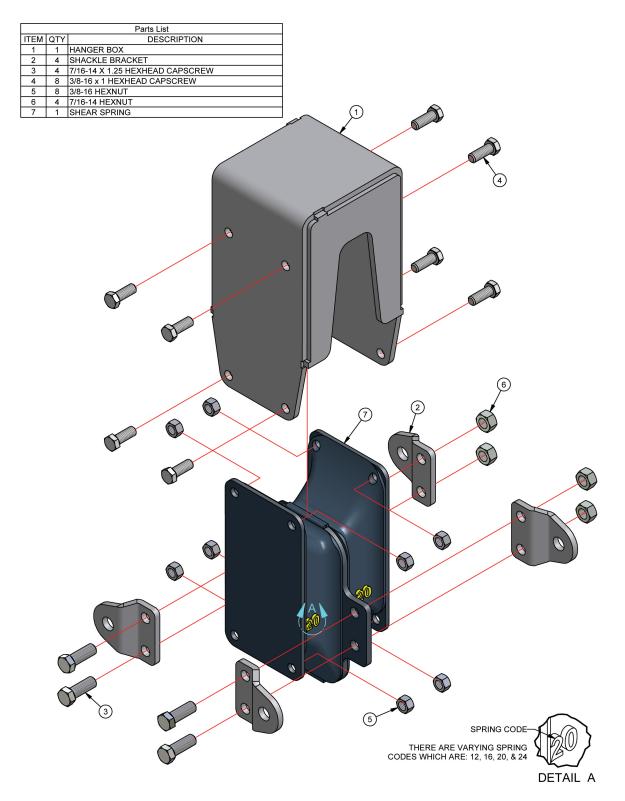

Made in the U.S.A. Patent Number 6,478,321

#### **MEASURING SHEAR SPRING DEFLECTION**

Park the vehicle on level ground. Measure Dimension A, ground to bottom edge of the center rubber spring metal. Measure Dimension B, ground to bottom edge of the outer spring metal. Use the following formula to determine shear spring deflection:

Defl = A - B

\*Note: the Dimension A should always be greater than Dimension B if the unit is properly sprung.

\*\*Nominal rubber spring deflection should be 1/2" to 3/4".



FIG. 1

#### **RUBBER SHEAR SPRING INSPECTION**

The shear springs (#7 in Parts Listing) should be periodically inspected for any tears or cracks. If a shear spring exhibits a 3" long and 3/4" deep crack or tear, the shear spring should be replaced. This can be checked by using a flat tool such as a putty knife. The putty knife can be used to probe the shear spring in the affected area. If the knife can be inserted 3/4" deep, by at least 3" long, the spring rate of the spring is affected and should be replaced. Note: It is normal to see shear spring weather checking, which is small surface cracks in the rubber. Weather checking does not require a shear spring to be replaced.

# **BASIC TROUBLESHOOTING**

PROBLEM/SYMPTOM	CAUSE	CORRECTION
Excessive Tire Wear	Axle alignment.	Align axles.
	Improper tire pressure.	Adjust air pressure.
Rough Ride	Torn shear spring.	Replace shear spring.
	Improper shear spring deflection.	Call MOR/ryde service department to select a different shear spring.
	Trailer is not level front to back.	Adjust pin box height to level out trailer.
Excessive Sway	Improper tire pressure.	Adjust air pressure.
	Torn shear spring. Improper hitch weight.	Replace shear spring. Travel trailers should have 10%-12% hitch weight.
	improper niten weight.	5 5th wheel trailers should have 20%-25% hitch weight.

\*If a problem occurs that is not addressed here, please contact MORryde International direct for further service information at 574-293-1581.

# **MORRYDE LRE SUSPENSION SYSTEM**

### SUMMARY OF WARRANTY

We, MORryde, inc., 1966 Moyer avenue, P.O. box 579, Elkhart, Indiana 46515 ("MORryde"), warrant to you, the original first purchaser of new MORryde rubber suspension system ("Product"), for a period of three (3) years from the date of original first purchase ("Warranty Period"), that the Product is free of defects in material or workmanship under normal use and service and will meet or exceed all of our advertised written specifications, excepting items and uses excluded from this Warranty. For a copy of the complete MORryde Warranty please call, write, or email us using the correspondence information listed below.

### PLEASE DIRECT ALL CORRESPONDENCE TO:

MORryde International, Inc. 1966 Sterling Ave Elkhart, IN 46516 Phone: (574) 293-1581 Fax: (574) 294-4936 www.morryde.com Email: service@morryde.com

