

TV10-S-35H

TELEVISION MOUNT

INSTALLATION INSTRUCTIONS



Thank you for choosing a MORryde television mount! This swivel snap-in mount is designed to be a low-profile solution to mount flat panel televisions to a vertical surface.

Key Features and Benefits

- Snap-In for easy removal and reattachment
- Up to 200 x 200 VESA pattern
- Easily mounted anywhere

Range of Motion*

- Swivel Adjustment
- Quick Snap-In Mechanism

Product and Safety Information

The TV10-S-35H mounts flat panel televisions or monitors to a vertical surface.

NOTE: This mount is not intended for use on brick, concrete, concrete block.

VESA* Mounting Plates

- 75mm x 75mm
- 100mm x 100mm
- 100mm x 200mm
- 200mm x 200mm

* Video Electronics Standards Association

Weight Capacity

- 35 lbs

Parts List

1. Portable Mounting Plate
2. TV Bracket
3. Hardware Pack

⚠ WARNING Improper installation may cause property damage or personal injury. The mounting surface may require reinforcement as it must be capable of supporting five times the combined weight of the television and the mount.

The installer assumes all responsibility of verifying that any installation method and mounting surface securely support the television and mount. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use of the mount during travel or otherwise.

Preparation

Television Stand

If applicable, remove the original base stand in accordance with the television owner's manual.

Hardware

Use appropriate hardware for securing your television to the mount and mounting your television to the mounting surface.



M4x12mm Bolt (4)



M5x12mm Bolt (4)



M6x12mm Bolt (4)



1/4" x 1" Lag Bolt (8)



M6 Flat Washer (8)



#10 Flat Washer (8)



1/4" Flat Washer (8)

Installation


⚠ WARNING Using mounting hardware too long for your application may puncture exterior structures.

⚠ WARNING If your television came with a stand, please remove the stand by referring to your television's owners manual and ensure the hardware has been removed from the mounting holes.

STEP 1

Secure the portable mounting plate to the mounting surface:



Pre-drill holes using a 1/8" drill bit. Use 1/4" lag bolts and 1/4" washers to secure base of bracket to the mounting surface.

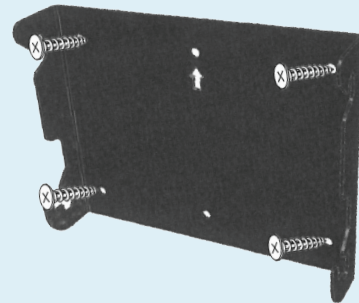

STEP 2

Secure the television to the bracket:

Line up the hole pattern on your television with the matching hole pattern on the bracket. Use the appropriate mounting hardware and washers to secure the television to the bracket.

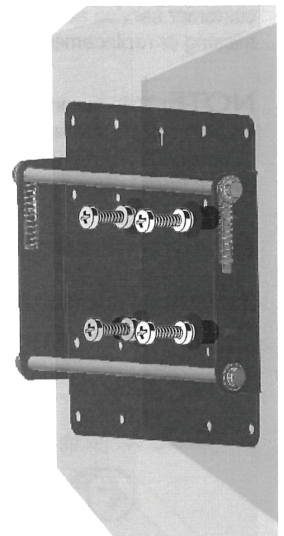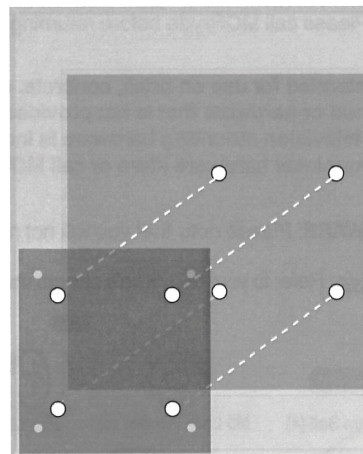


STEP 3

Install bracket with television to portable mounting plate:


Attach as shown to the right.



To Install

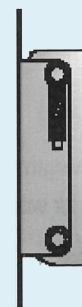

Installed

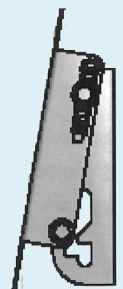

To Remove