 


TV40-011H

TELEVISION MOUNT

INSTALLATION INSTRUCTIONS

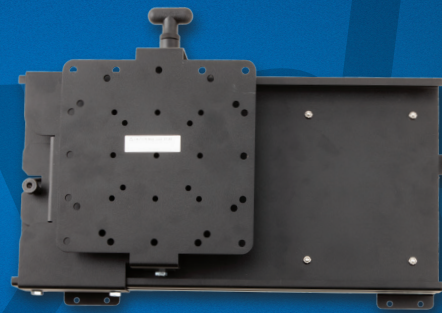

Thank you for choosing a MORryde television mount! This horizontal sliding mount is designed to mount flat panel televisions to a vertical surface or wall, most commonly inside the RV.

Key Features and Benefits

- Extends 20.5"
- Swivel Adjustment
- Secure Lock for Travel

Range of Motion*

- Slides out and swivels up to 180°

* For most applications

Product and Safety Information

The TV40-011H mounts flat panel televisions or monitors to a vertical surface.

NOTE: This mount is not intended for use on brick, concrete, concrete block.

VESA* Mounting Plates

- 75mm x 75mm
- 100mm x 100mm
- 100mm x 200mm
- 200mm x 200mm

* Video Electronics Standards Association

Weight Capacity

- 35 lbs

Parts List

1. Wall Bracket
2. Mounting Plate
3. Hardware Pack

⚠ WARNING Improper installation may cause property damage or personal injury. The mounting surface may require reinforcement as it must be capable of supporting five times the combined weight of the television and the mount.

The installer assumes all responsibility of verifying that any installation method and mounting surface securely support the television and mount. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use of the mount during travel or otherwise.

Preparation

Television Stand

If applicable, remove the original base stand in accordance with the television owner's manual.

Hardware

Use appropriate hardware for securing your television to the mount and mounting your television to the mounting surface.



M4x12mm Bolt (4)



M5x12mm Bolt (4)



M6x12mm Bolt (4)



1/4" x 1" Lag Bolt (8)



M6 Flat Washer (8)



#10 Flat Washer (8)



1/4" Flat Washer (8)

Installation

 
⚠ WARNING Using mounting hardware too long for your application may puncture exterior structures.

⚠ WARNING If your television came with a stand, please remove the stand by referring to your television's owners manual and ensure the hardware has been removed from the mounting holes.

STEP 1

Secure the wall bracket to mounting surface:



Pre-drill holes using a 1/8" drill bit for use with 1/4" lag bolts. Use lag bolts or self-drilling screws (depending on your mounting surface) with 1/4" washers to secure the base of bracket to the mounting surface.

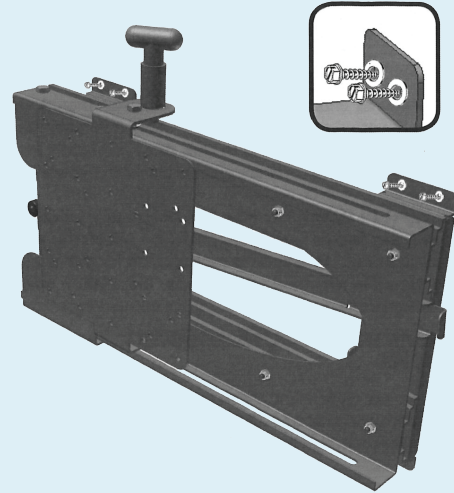

STEP 2

Secure the television to the mounting plate:

  Line up the hole pattern on your television with the matching hole pattern on the universal mounting plate as close to the center as possible. Use the appropriate hardware and washers to secure the television to the mounting plate. This can be done without removing the mounting plate, figures are shown without bracket for illustration purposes only.

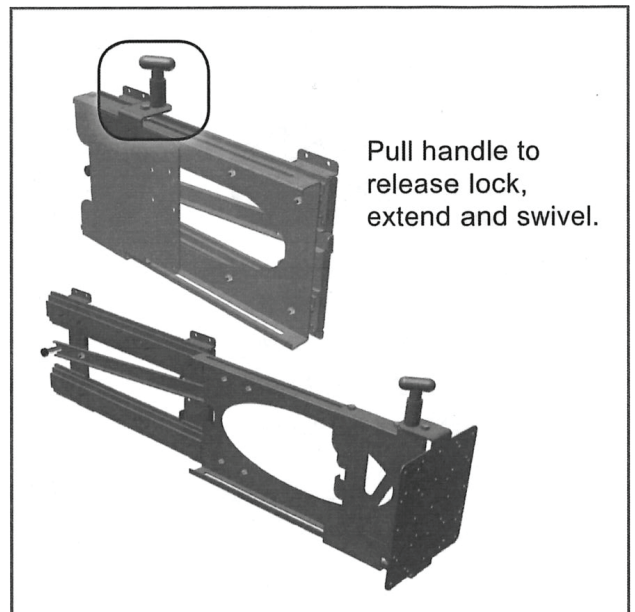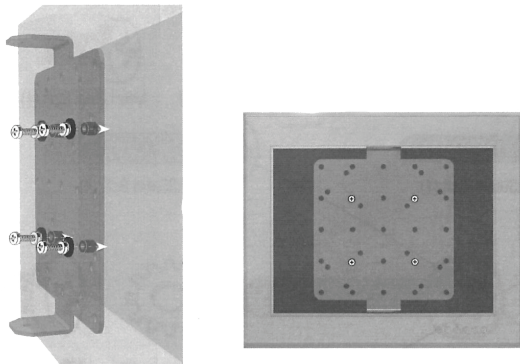

⚠ WARNING Step 2 may require two people to lift the television safely into place. MORryde is not responsible for property damage and/or personal injury due to improper or unsafe installation practices.

Warranty

Please Visit www.MORryde.com for warranty information.

If you have questions about the installation process, please call our customer service department at **574.293.1581** for assistance.



Above. Beyond. Always.

574.293.1581 • www.MORryde.com

At MORryde, we have a passion for solving problems. Whether we're fabricating custom solutions, modifying a commercial chassis, or creating our innovative products, we answer to a wide range of markets and deliver on a variety of needs. At MORryde, it's simply about doing MORE for our customers, and it doesn't stop at the sale. We stand behind our products, believing in quality first, service always. No matter the issue, we'll be the first to respond and the last to be satisfied. In short, we build better — together.



TV40-011H | VERSION 2



Above. Beyond. Always.

574.293.1581 • www.MORryde.com