

QUICK CONNECT STEP

PRE-INSTALLATION QUALIFIER

Will the Quick Connect Step work for your RV? Please review the steps below.

STEP 1

MOUNTING SPACE

Measure the space between the bottom of the threshold and the opening for the current steps. A minimum distance of 1.75" is required to attach the steps.




NOTE: The steps will not work for doors with trim under the threshold.

STEP 2

INTERNAL FRAMING


The brackets require structural reinforcement **behind** the skirt metal and below the threshold. Units that do not have any reinforcement for the brackets will require modification. For questions contact our Parts Department at 574-293-1581.

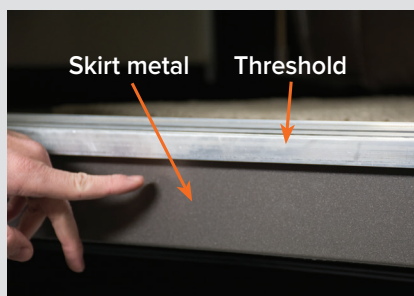

STEP 3

STEP HEIGHT

Measure from the top of the threshold to the ground. Refer to the Fit Chart below for the corresponding Quick Connect Step part number.

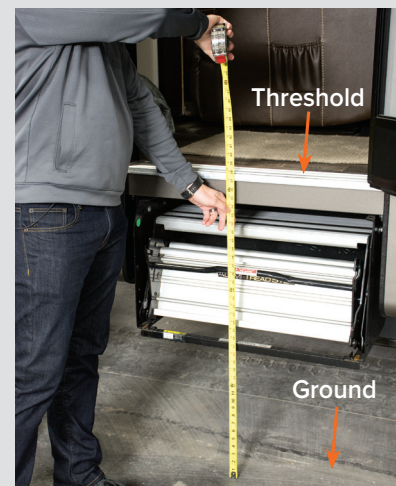

If you have met the requirements above, use the dimensions from Step 3 to locate your part number in the fit chart below.

FIT CHART

	PART NUMBER	STEP HEIGHT
2 STEP	STP-221	21.5" – 27.5"
3 STEP	STP-222	27.5" – 36"
4 STEP	STP-223	35.5" – 44"

OPTIONAL HANDRAIL



1ST GEN

**3 STEP
HANDRAIL**
STP214-029H

**4 STEP
HANDRAIL**
STP214-006H

2ND GEN

**3 STEP
HANDRAIL**
STP214-121H

**4 STEP
HANDRAIL**
STP214-120H



Above. Beyond. Always.

Please contact us if you have any questions:
574-293-1581 | www.MORryde.com