



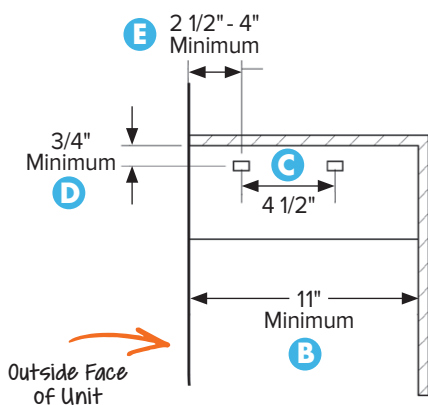

STORAGE BOX QUALIFIER

A perfect storage solution that replaces the stock steps after a StepAbove is installed.

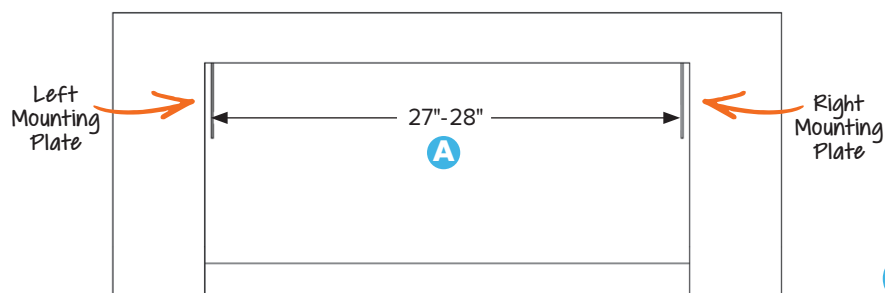

- A** Width of mounting plates must be between 27"-28"
- B** Depth from side skirt to back of step cavity must be 11" minimum
- C** Holes in mount plate must be 4 1/2" on center
- D** Holes in mount plate must be a minimum of 3/4" from the top of the step cavity
- E** Outboard mount hole must be between 2 1/2" - 4" from side skirt



Above. Beyond. Always.

574.293.1581 • MORryde.com