



AIRSTREAM®

INSTALLATION INSTRUCTIONS

Please take a moment to review the **Airstream® Qualification Guide** before proceeding with these Installation Instructions.

STEP 1

Dry fitting. Set the step in the unit with the hinge on the floor as it would be installed with the stop brackets adjusted out. Check inside the unit for clearances or interferences.

STEP 2

Center the step in the opening and mark the amount that needs to be cut, which is about 23 3/4". Cut the flange using a circular grinder, Dremel tool, or oscillating saw.




STEP 3

After the flange is removed, set the step in the lowered position in the doorway. Adjust the legs to the correct height. Close the door to check the clearance under the door.



STEP 4

Lift your steps inside the doorway and ensure they are latched onto the door flanges. Measure 1 7/16" from the inside of the threshold to the front side of the step hinge plate for proper installation.

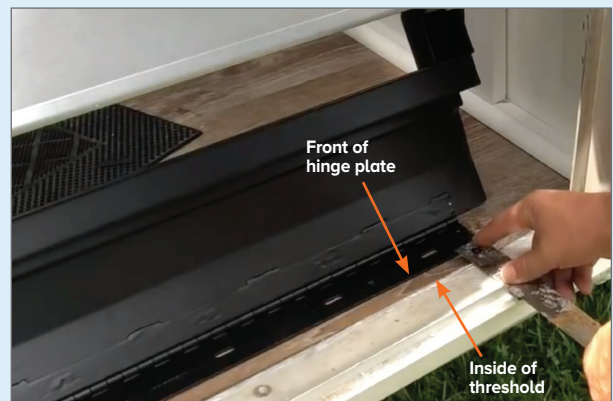

Above. Beyond. Always.

STEP 5

Once the measurement has been checked, secure the two outermost hinge holes using supplied screws.

STEP 6

Fold the step down and verify the door still closes. If it closes and clears, install the rest of the screws in the hinge.



ALL DONE



⚠ WARNING Improper installation may cause property damage or personal injury. The Installer assumes all responsibility of verifying the safety and viability of any installation method and mounting surface. MORryde is not liable for property damage or injury caused by incorrect mounting, installation methods not recommended by MORryde, hardware not provided by MORryde, or incorrect use during travel or otherwise.

If you have any questions, please give us a call at **574-293-1581** or send an email to **parts@MORryde.com**.



Above. Beyond. Always.

574-293-1581 • www.MORryde.com