


JP54-066


OPTIONAL TRAIL KITCHEN TRAY*

INSTALLATION INSTRUCTIONS

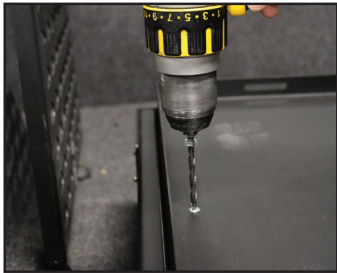

STEP 1


Using a screw gun equipped with a 13/64" drill bit, drill out the existing rivets holding the stock fridge tray to the trail kitchen.

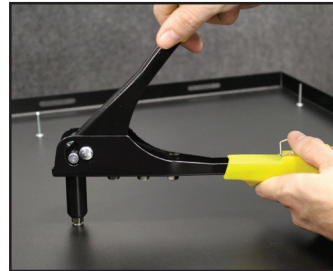

STEP 3*

Install the tray by inserting the supplied rivets into the holes of the new, larger tray to the trail kitchen.

*If you do not own a rivet gun, there are inexpensive options (under \$10) available at many local stores such as Walmart, Hobby lobby, or Harbor freight.

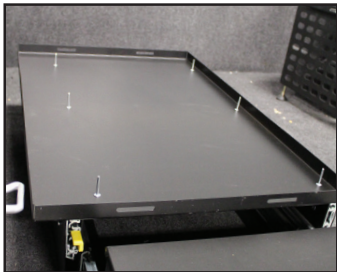

STEP 2

Line up the new, larger tray with the holes in the trail kitchen where the previous tray was installed.



Tools Needed

- Rivet gun
- 13/64" drill bit
- Screw gun

*Back seats must be put down to use.

MORryde

HEAVY. DUTY. ADVENTURE.

www.MORryde.com • 574.293.1581