



JP54-079

OVERHEAD MOLLE PANEL

INSTALLATION INSTRUCTIONS



TOOLS NEEDED

- (2) 7/16" wrenches
- T-40 Bit/Driver



STEP 1

Remove the plastic snap-in cover/Trim piece from both the left and right side of the roll/sports bar exposing the factory soft top mounting locations.



STEP 2

Using two (2) black 1" T-40 Mounting Bolts per side, affix the left and right side mounting plates to the roll/sports bar.


NOTE: Mount each plate so the bent-tab end is oriented in and up (as identified in the picture on opposite page).

NOTE: Mounting bolts should each be torqued to 10ft lbs.

STEP 3

Once mounting plates are in place, use one (1) 1/4" – 20 x 1" bolt; two (2) flat washers, one (1) nylon washer and one (1) Nylock hex nut, to attach the top (left and right) tab(s) of the MOLLE Panel to the top (bent) tab of each mounting plate.

NOTE: Bolt head should face the window and should attach (from outside to inside) in the following manner/order: Bolt Head, Flat Washer, Mounting Plate Tab, Nylon Washer, MOLLE Panel Tab, Flat Washer, Nylock Hex Nut.

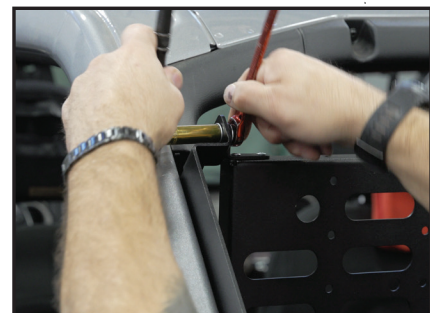

MORryde

HEAVY. DUTY. ADVENTURE.

MORryde.com • 574.293.1581




JP54-079

OVERHEAD MOLLE PANEL



INSTALLATION INSTRUCTIONS

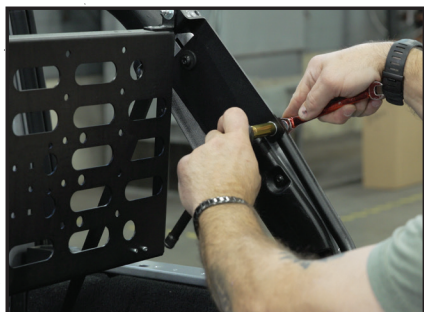

STEP 4

Using one (1) 1/4" – 20 x 1 3/4" bolt, two (2) flat washers, one (1) nylon washer and one (1) nylock hex nut attach each side of the support tube to the bottom tab of each mounting plate.

NOTE: Bolt head should face inside the assembly and should attach (from inside to outside) in the following manner/order: Bolt Head, Flat Washer, Mounting Plate Tab, Nylon Washer, Support Tube, Flat Washer, Hex Nylock Nut.



STEP 5

Once the support tube is in place, lift the MOLLE panel and rotate the support tube so that it rests in the support notch across the bottom of the MOLLE Panel.



MORryde

HEAVY. DUTY. ADVENTURE.

MORryde.com • 574.293.1581